



Specifications/Technical data (subject to change without prior notice):

	WW-200 DUO 2 in 1 wire binding	
Max. punching capacity, paper	20sheets(80gsm/20lbs)	
Max. punching capacity, plastic foils	2sheets(0.18mm/7mil))	
Punching margin control(for 2:1 only)	2mm - 6mm(3/32" - 1/4")	
Binding capacity	Max. wire size: 32mm(1-1/4"), for 280	
	sheets	
Max. width of paper	A4, Letter and extra large size	
Punching slots	A4 size: 34 for 3:1, 23 for 2:1	
	Letter size: 32 for 3:1, 21 for 2:1	
Adjustable paper stop	Yes	
Net weight	14.2kgs(31.24lbs)	
Dimensions(W x D x H)	360 x 440 x 190mm(14" x 17" x 7.5")	

Binding guide - 2:1

Wire(m	m/inch)	Sheets	Margin
6mm	1/4"	25	2
8mm	5/16"	45	2
10mm	3/8"	65	2
11mm	7/16"	95	2
12mm	1/2"	125	4
14mm	9/16"	145	4
16mm	5/8"	155	4
19mm	3/4"	195	4
22mm	7/8"	220	6
25mm	1"	245	6
28mm	1-1/8"	270	6
32mm	1-1/4"	320	6

Binding guide - 3:1

Wire(mm/inch)		Sheets
6mm	1/4"	25
8mm	5/16"	45
10mm	3/8"	65
11mm	7/16"	80
12mm	1/2"	95
14mm	9/16"	125


Intimus International GmbH Bergheimer Straße 6 - 12 88677 Markdorf / Germany

Tel.: ++49 (0)7544 / 60-0 Fax.: ++49 (0)7544 / 60-248 E-mail: sales.de@intimus.com

www.intimus.com

2-in-1 Binding Machine

Wire binding pitch 3:1 + 2:1 Reliure Anneaux Métal Pas 3:1 + 2:1 Encuadernación de wire paso 3:1 + 2:1 Drahtbindung Teilung 3:1 + 2:1

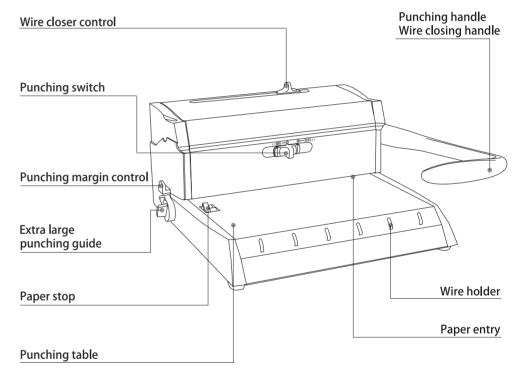





Max. wire binding 280 sheets Pitch 3:1+2:1




Max. punching 20 sheets



Margin

2-6mm(3/32" – 1/4")




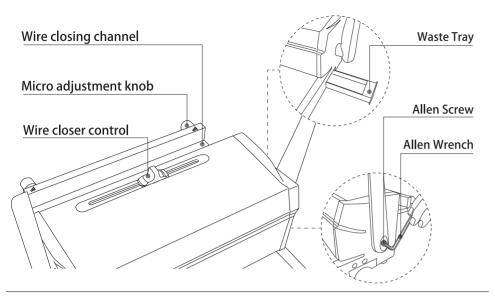




Assemble the Punching handle vertically with the provided Allen wrench and Allen screw. Set the Punching switch with the Punching handle at full upright position. Insert paper for punching only after you finish setting up the Punching switch.


Punching

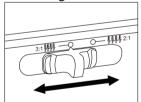


(Fig.1)
Get ready: Set the **Punching Switch**for required punching format.

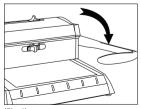


(Fig.4)
Push paper(max. 20sheets) into the
Paper entry. Pull the Punching handle
all the way down until it stops to punch
completely through.

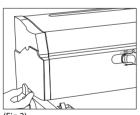


(Fig.2)
Get ready: Set the **Punching margin control** at the desired position.

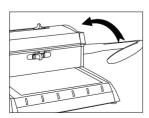

(Fig.5)
Push back the **Punching handle** to its original upright position. Remove punched sheets.

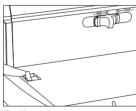


(Fig.3)
Get ready: Set the **Paper stop** at the desired position.

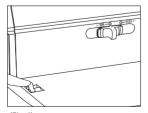


(Fig.6)
Extra large punching guide: Set the Paper stop flush along with the Punching table.



(Fig.7) Extra large punching guide: Rotate the Extra large punching guide and expose the desired registration pin for punching.

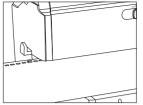


(Fig.8)
From right to left, push No. 6 punched hole through the 3:1 wire registration pin, or No. 4 through the 2:1 wire registration pin. Align the paper into the **Paper entry** properly. You can do continuous punching accurately.

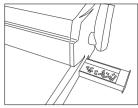


(Fig.9)
Empty the **Waste tray** at the right side of the machine. Frequent clearance is required.


Wire binding

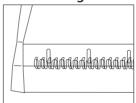


(Fig.1)
Insert a wire onto the **Wire holder**.

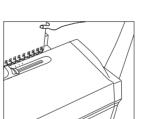


(FIG.4)
Remove the booklet from the **Wire**holder. Put it down and let the wire
loops rest fully into the **Wire closing**channel.

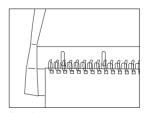


(Fig.2)
Load punched sheets directly onto the wire loops.

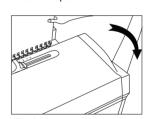

(Fig.5)
Pull down the **Wire closing handle**completely to close the wire. Return
it to the original position. Remove
the bound booklet.

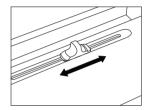

(Fig.3)
Set the **Wire closer contro**l for the desired wire size.

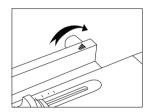

(Fig.6)
Turn the **Micro adjustment knob** to refine the wire closing result. Counter clockwise to reduce the opening.
Clockwise to enlarge the opening.

General Safeguards

- Place your binder on a stable surface.
- Use the machine only for its intended purpose of punching and binding paper and document covers according to the indicated specifications.
- Always test the machine with some scrap paper before punching the final document.
- Take care that there are no staples or such like in the documents to be bound.
- Empty the waste tray regularly.
- Lift the machine from the bottom, not the cover or the handle.
- Unauthorized maintenance is not allowed.